


SMART REMOTE

FOR GoPro

USER GUIDE

LAYOUT

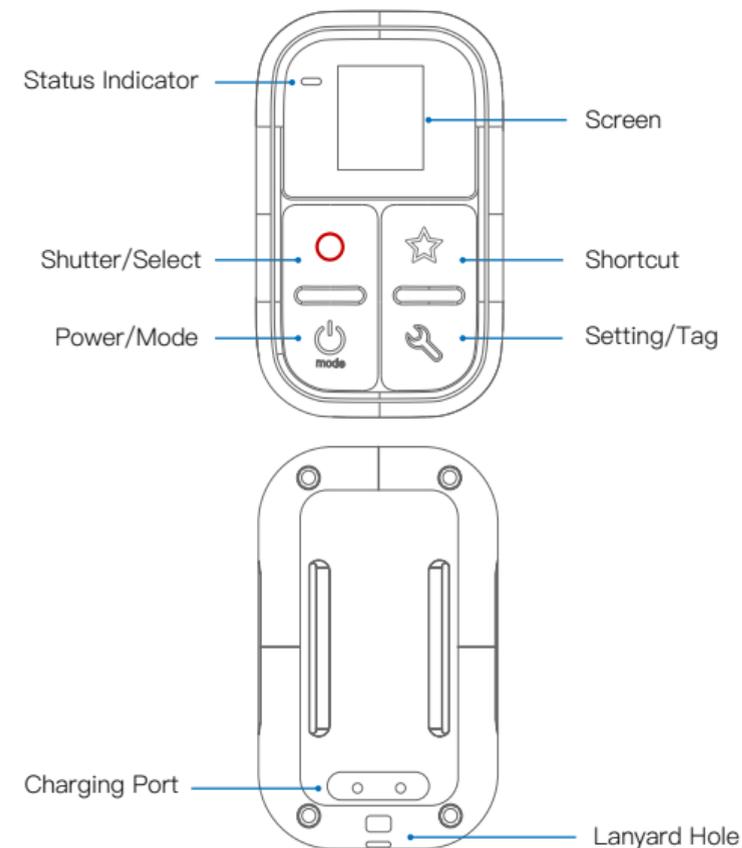

CHARGING

Attach the magnetic charging cable to charging port on the back of remote. 5V/1A USB charger is required.

When charging, the status indicator will be emitting red light, and goes off when battery is fully charged.

When the remote control is in use and the battery is almost exhausted, a warning icon  will appear on the screen.

BUTTONS

- **Power /Mode Button** 

Power on: Push and hold for 1 second to turn on

Power off: Push and hold for 3 seconds to turn off

Switching modes: Press **Power/Mode** button one time, the camera will switch to next mode. When multiple cameras are connected, the mode will rotate among the Video, Photo, Burst, and Time Lapse modes.

- **Shutter/Select Button** 

Press **Shutter/Select** button to start/stop shooting a picture or video.

When the camera in setting mode, press this button to confirm the current selection.

- **Shortcut Button** 

When the camera in Video, Photo, Burst, Time Lapse, Play back, Setting modes, press **Shortcut** button and hold for 3 seconds to set current mode as Shortcut mode. And then when you press this **Shortcut** button to enter your favorite mode.

**HERO 7 does not support saving the setting mode as a shortcut*

- **Setting/Tag Button** 

When the **Setting/Tag** button is pressed, the camera will enter or exit setting mode.

During recording, press the **Setting/Tag** button to mark a HiLight tag. (It is applied to Hero4, Hero4 session. For Hero5 and later models, please press **Power/Mode**  button to mark a HiLight tag)

PAIRING CAMERA

- Please power on the remote and camera.
- Press and hold **Setting/Tag** Button  for 3 seconds to enter the pairing mode
- Set the camera to pair mode: Connections>Connect Device> Smart Remote

Do the same operation to other cameras if you are going to pair multiple cameras.

- Wait for the pairing success notification on the screen, press the **Setting/Tag** Button to exit pairing mode and ready to go.
- If the pairing failed, select **Reset Connections** in camera's settings and do the above operation again.
- The paired camera and remote will connect automatically when they are powered on. Make sure the camera's **Wireless Connections** is turned on, they will connect promptly.

FIRMWARE UPDATE

- When new model camera come to market, there will be update accordingly. Please visit www.yoctop.com/remote to download firmware.
- Press and hold **Setting/Tag** Button  for 3 Seconds to enter the pairing mode.
- Connect the Wi-Fi hotspot SSID HERO-RC-XXXXXX with your computer or smart phone.
- Open <http://10.71.79.1> in your web browser.
- Click **Update Firmware** to select the Firmware file.
- Click **Update** button and wait remote to finish update, you can check the remote screen for notification.

YOCTOP

More information:

WWW.YOCTOP.COM

or send email to

customerservice@yoctop.com