

# SMART REMOTE USER GUIDE

## YOCTOP

More information:

[WWW.YOCTOP.COM](http://WWW.YOCTOP.COM)

 
or send email to

[customerservice@yoctop.com](mailto:customerservice@yoctop.com)

Documents and Videos:



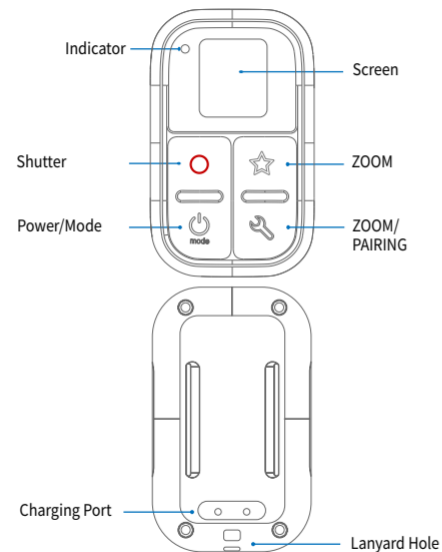

## LAYOUT




## PAIRING A CAMERA

The menu of different cameras is slightly different, please refer to the camera's manual for the instructions on the Smartphone App Connection if necessary.

1. On the camera, select MENU → ((P)) (network) → [Bluetooth Settings] → [Enable].
2. Select MENU → ((P)) (network) → [Wi-Fi/Bluetooth connection] → [Connect to Smartphone] → [Add a device to connect to] → [Do not display] → [Pair via Bluetooth]. When the screen prompts "Pairing in progress" and other information, go to the remote control for the next step.
3. On the Remote, press **Mode Key**  1S to power on, A pairing prompt appears on the screen, please press the **Wrench key**  to enter the pairing mode.
4. When a message: "Connect to this Smartphone:YTRC" appears on the camera's screen, select [OK].
5. If pairing fails, turn off the camera and remote and try again.

### About Pairing

If you have multiple cameras, the remote will require re-pairing to switch between cameras.


When pairing is required, please press the **Mode Key**  to enter the setting mode, and then press the **Wrench Key** to enter the pairing mode

## FEATURES


### Power on/off


**Power on:** Press and hold  for 1 second to turn on  
**Power off:** Press and hold  for 3 seconds to turn off

### Modes Switch

Each time the **Mode Key**  is pressed, the remote will switch to the next mode in sequence: Photo mode, Video mode and Settings.


### Still Image Shooting

Press the **Mode key**  to switch the remote control to Photo mode.


 
When the AF function is on, click the **Shutter Key**  and the camera will focus, if the focus is successful, it will take a photo. If the focus is unsuccessful, the camera will not take a photo.

When the MF function is on, clicking the **Shutter** will not focus, and the camera will take a photo directly. When the camera is in [Self-timer] mode, it will finish the countdown before shooting. When the camera is in [continuous] mode, press the **Shutter** to start continuous shooting, and release the **Shutter** to end continuous shooting. When the camera is in [Bulb] mode, click the **Shutter** to start exposure, click the **Shutter** again stop exposure.

### Shooting a Video

Switch the remote to Video mode, click the **Shutter**  to start shooting video, and click **Shutter** again to stop shooting.


 
### ZOOM/FOCUS

Only some motorized lens can be control remotely: G7X III, G5X II, SX70 HS and 80D with PZ-E1 Adapter. Press the **Star**  / **Wrench**  of the remote to zoom in/out the len.

## CHARGING

- Attach the magnetic charging cable to charging port on the back of remote. Cell phone USB charger is required.
- The charging indicator will turn on When charging and turn off when battery is fully charged.
- When the remote control is not connected to the camera, it will automatically Power off after two minutes to save battery.

## CONTROL MOBILE PHONE

- Press the **Star Key**  for 1 second to power on, the mobile phone icon will appear on the screen.
- Select YOCTOPRC in the Bluetooth settings of phone, and when the pairing request pops up Select OK to pair.
- After the pairing, the phone will automatically connect to the remote when the remote is turned on.
- Set the phone's camera button to "Volume Down". Press the **Shutter**  to take pictures.
- If you encounter an unknown problem, please find "YOCTOPRC" device in the Bluetooth settings of your phone and delete it, then pair again.

## TROUBLESHOOTING

- Each of our products has been tested before shipping and has a one-year warranty.
- If you encounter any problems, please contact us and our customer service team will solve the problem for you: [customerservice@yoctop.com](mailto:customerservice@yoctop.com)
- You can also restore the camera's Bluetooth connection to factory settings to solve the camera's problems.