

智能遥控器

使用说明书

 
适用于尼康



更多详细信息请扫码

YOCTOP
悦科科技

基本布局

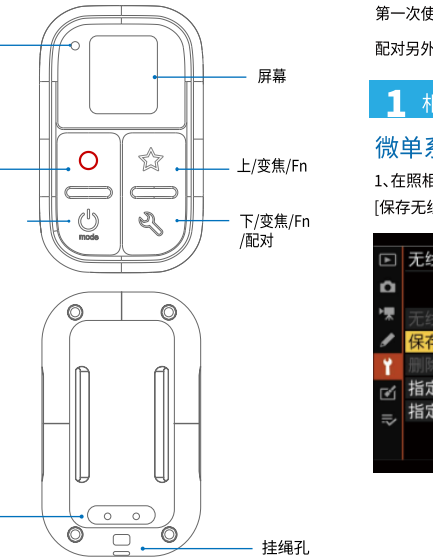



配对指南

第一次使用遥控器之前,必须与照相机配对。"配对"是使相机和遥控器形成一对一的连接关系。一次只可将一台照相机与遥控器配对。配对另外一台相机的时候会替代之前的相机。

1 相机进入配对模式


微单系列 (Z5、Z 6III、Z 6II、Z 7II、Z f、Z fc、Z 50、Z 30)

  - 1、在照相机设定菜单中选择[无线遥控(ML-L7)选项]>[保存无线遥控器]并按下OK。
- 2、确保相机进入配对和保存遥控器的模式

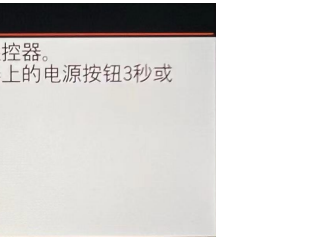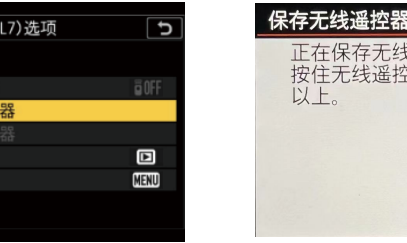


COOLPIX系列 (A1000、P1000、P950、B600)

 - 1、相机按下Menu按键,选择网络菜单选择[选择连接],按下OK。

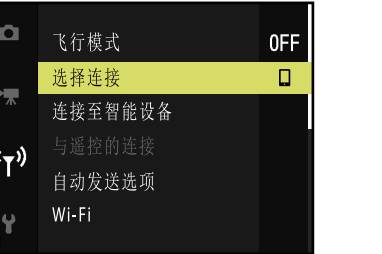

- 3、然后选择[与遥控的连接],按下OK

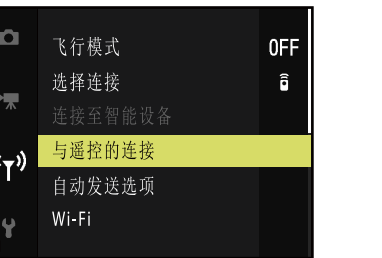 


2 遥控器进入配对模式

- 1. 按下 电源键 1秒钟打开遥控器
- 2. 按下 扳手键 进入配对模式
- 3. 等待相机配对

3 在相机上完成配对

 - 等待一段时间,当相机提示[是否允许与本机配对]的询问时,请选择[确定]。

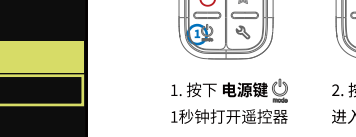

TIPS

在照相机设定菜单中选择[无线遥控(ML-L7)选项]>[无线遥控连接]>[启用]并按下OK。需要使用遥控器的时候,请确保这个选项为ON。

功能操作

开关机

- 开机:按下 按键1秒钟。
- 关机:长按 按键3秒钟。

模式切换

连接相机后每按一下Mode键,相机就会依次进入下一个模式:照片拍摄、视频拍摄、长曝光和设置模式。

拍摄照片

按模式键 将遥控器切换到照片模式。点击快门键 相机会释放快门,进行拍照。如果相机处于自动对焦模式,会先进行自动对焦。不支持半按和长按,因此不能用于需要长按快门的功能。

拍摄视频

按模式键 将遥控器切换到视频模式下,点击快门键开始拍摄视频,再次点击快门键,结束拍摄。

唤醒休眠的相机

Z系列相机在休眠之后,按遥控器的按键会唤醒相机,并在一段时间后自动连上相机。

遥控变焦

只有支持遥控变焦的镜头才能遥控变焦。按遥控器的星星键 和扳手键 可以控制相机的变焦。

Fn键

Z50等Z系列相机,在设置模式下按遥控器的快门键 和星星键 对应的是Fn1和Fn2快捷键。Fn1和Fn2快捷键的功能在相机无线遥控的菜单里可以设置。

充电

请将磁性充电线一头吸附到背后充电口,然后将USB端口插到手机充电器的USB口上进行充电。充电时,指示灯会发黄光。电池充满后黄光熄灭。充电线带有保护,但请充电时注意远离金属物品,防止短路。遥控器没有连接相机的情况下,两分钟后会自动关机以节省电池。

超长曝光与间隔拍摄

开关机

- 1、相机切换到Bulb模式,并关闭长曝光降噪处理。
- 2、进入遥控器[设置]菜单,通过星星键 和扳手键 移动光标到[长曝光开关],按快门键 确定,然后选择[ON],并确定。

模式切换

连接相机后每按一下Mode键,相机就会依次进入下一个模式:照片拍摄、视频拍摄、长曝光和设置模式。

拍摄照片

按模式键 将遥控器切换到照片模式。点击快门键 相机会释放快门,进行拍照。如果相机处于自动对焦模式,会先进行自动对焦。不支持半按和长按,因此不能用于需要长按快门的功能。

拍摄视频

按模式键 将遥控器切换到视频模式下,点击快门键开始拍摄视频,再次点击快门键,结束拍摄。

唤醒休眠的相机

Z系列相机在休眠之后,按遥控器的按键会唤醒相机,并在一段时间后自动连上相机。

遥控变焦

只有支持遥控变焦的镜头才能遥控变焦。按遥控器的星星键 和扳手键 可以控制相机的变焦。

Fn键

Z50等Z系列相机,在设置模式下按遥控器的快门键 和星星键 对应的是Fn1和Fn2快捷键。Fn1和Fn2快捷键的功能在相机无线遥控的菜单里可以设置。

充电

 
请将磁性充电线一头吸附到背后充电口,然后将USB端口插到手机充电器的USB口上进行充电。充电时,指示灯会发黄光。电池充满后黄光熄灭。充电线带有保护,但请充电时注意远离金属物品,防止短路。遥控器没有连接相机的情况下,两分钟后会自动关机以节省电池。

超长曝光与间隔拍摄

间隔时间




长曝光开关



超长曝光



 
开始曝光



间隔时间



 
长曝光开关



超长曝光



 
开始曝光



间隔时间



 
长曝光开关




超长曝光



 
开始曝光




间隔时间

 

长曝光开关

 


超长曝光

 


开始曝光



 
间隔时间




长曝光开关

 


超长曝光

 


开始曝光

 


间隔时间

 

长曝光开关

 


超长曝光

 

开始曝光



 
间隔时间




长曝光开关



 超长曝光



开始曝光

 

故障排除

- 遇到问题请参考视频或咨询在线客服
- 将相机恢复到出厂设置,并重新进行配对过程
- 本产品提供一年保修,保修请联系购买店铺的客服。
- 有任何的问题和建议,可以给我们售后客服发邮件。customerservice@yoctop.com

参数

电池容量	430mah
充电电压	5V
充电电流	300ma
充电时间	1.5小时
工作距离	10米

SMART REMOTE

USER GUIDE

 
For NIKON

Online Documents and Videos please scan QR



YOCTOP

LAYOUT

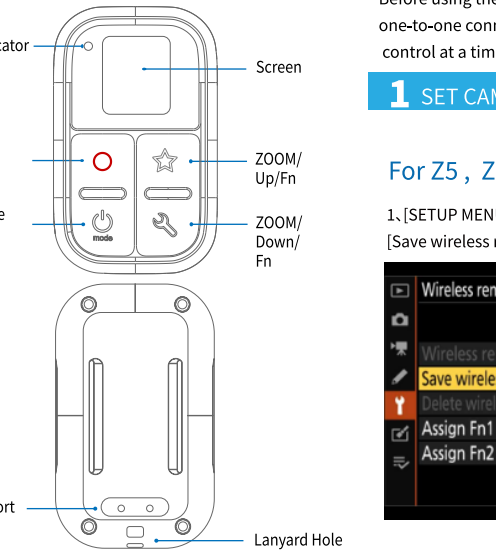


PAIRING GUIDE

Before using the remote control for the first time, you must pair it with the camera. "Pairing" is to establish a one-to-one connection between the camera and the remote control. Only one camera can be paired with the remote control at a time. When you pair a different camera, it replaces the previous camera.


1 SET CAMERA TO PAIRING MODE

For Z5 , Z 6III , Z 6II , Z 7II , Z f , Z fc , Z 50 , Z 30

 1. [SETUP MENU] > [Wireless Remote (ML-L7)] > [Save wireless remote controller] > OK.

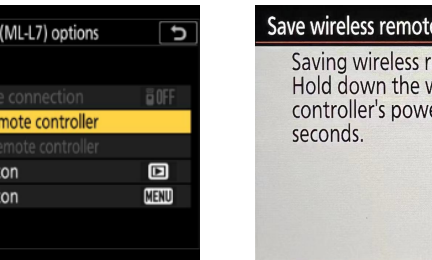


 2. The camera should display the Saving wireless remote controller page

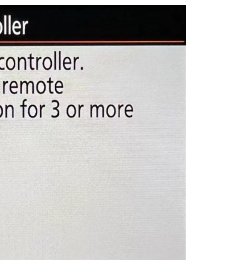


For A1000, P1000, P950, B600:

 1. [Network menu] > [Choose connection]

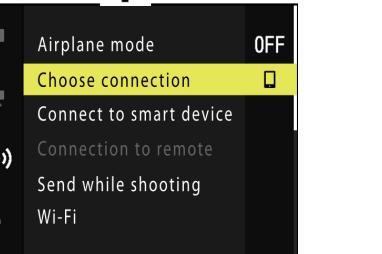


 3. Select [Connection to remote], and press the OK button

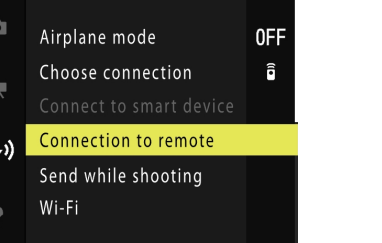


If you cannot select [Connection to remote], set the following in the network menu.
[Airplane mode]: [Off]
[Bluetooth] > [Connection] > [Enable]

 2. Select [Remote control], press the OK button

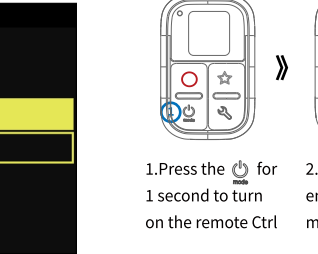


 Select [Wireless remote (ML-L7) options] > [Wireless remote connection] > [Enable]
in the camera setup menu and press OK.
Make sure this option is ON when you need to use remote controller.

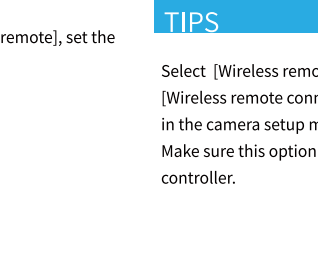


TIPS

 Select [Wireless remote (ML-L7) options] > [Wireless remote connection] > [Enable]
in the camera setup menu and press OK.
Make sure this option is ON when you need to use remote controller.

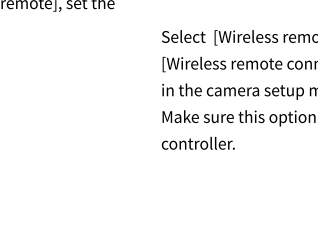

2 SET REMOTE CTRL TO PAIRING MODE

 1. Press the [Power] button for 1 second to turn on the remote Ctrl



2. Press the [Pairing] button to enter the pairing mode.



3. Wait for pairing to complete

 


4. Move the cursor to [INTERVAL] and click the Shutter button to confirm the selection. Select the interval time you need under the [INTERVAL] menu.



3 FINISHING PAIRING

Wait for a while. When a confirmation message appears on the camera's screen, select [OK].



FEATURES

Power ON/OFF

Power on: Press and hold [Power] for 1 second to turn on

Power off: Press and hold [Power] for 3 seconds to turn off

Modes Switch

Each time the Mode button is pressed, the remote control will switch to the next mode in sequence: Still Image Shooting , Video Shooting , long EXPO , Settings.

Still Image Shooting

Click the Mode button to switch to Still image mode.

Click the Shutter button to shoot.

In Bulb mode, click the Shutter button to start the exposure. Click Shutter again to end exposure.

Shooting a Video

Switch the remote control to Video Shooting mode, Click the Shutter button to start shooting video, Click the Shutter button again to end the shooting.

ZOOM

• Only some motorized lens can be control remotely.

• press the Star / Wrench of the remote control to zoom in/out the camera.

Wake Up the amera

After the Z series camera is in sleep mode, pressing a button on the remote control will wake up the camera and automatically connect to the camera after a period of time.

Fn Keys

For Z series cameras such as Z50, in the setup mode, pressing the Shutter button and the Star button on the remote control corresponds to the Fn1 and Fn2 shortcut keys. The functions of the Fn1 and Fn2 shortcut keys can be set in the menu of the camera wireless remote control.

CHARGING

• Attach the magnetic charging cable to charging port on the back of remote control. Cell phone USB charger is required.

• The charging indicator will turn on When charging and turn off when battery is fully charged.

• When the remote control is not connected to the camera, it will automatically Power off after two minutes to save battery.

SUPER LONG EXPOSURE

Super long exposure controls the camera's Bulb mode to expose for a specified time. You can also specify an interval to automatically repeat the shooting and create a time-lapse photography.

1 Make sure the camera is set to Bulb mode and turn off the Long exposure noise reduce function.

2 Enable exposure control function In Menu of remote. In [SETTINGS] menu, Use Wrench button to move cursor to [EXOP SET.] and click the Shutter button. Then select [ON].

3 Connect the camera and press the Mode button to switch the remote's mode to the [LONG EXPO].

VER VX.XX

☆ = MENU
Wrench = PAIR

EXPO SET.

ON <<
OFF

LONG EXPO

START BULB
INTERVAL

0 s
1 s
3 s
5 s
10 s

TIME-LAPSE

Press the Mode button to switch to the [TIMELAPSE] shooting mode, select the a option, and the remote control will control the mobile phone to perform time-lapse shooting.

TIME-LAPSE

OFF
0 s
1 s
2 s
3 s

CONTROL SMARTPHONE

• Press the Star button for 1 second to power on the remote control, the mobile phone icon will appear on the screen.

• Select the YOCTOPRC in the Bluetooth settings of phone, and when the pairing request pops up Select OK to pair.

• After the pairing, the phone will automatically connect to the remote when the remote is turned on.

• Set the phone's camera button to "Volume Down".

• Press the Shutter button to take pictures.

• If you encounter an unknown problem, please find the YOCTOPRC device in the Bluetooth settings of your phone and Delete it, then pair again.

TROUBLESHOOTING

• You can restore the camera's Bluetooth connection to factory settings to solve the camera's problems.

• Each of our products has been tested and has a one-year warranty.

• Contact us if you have any questions: customerservice@yoctop.com

PARAMETER

Battery Capacity	430mah
Voltage	5V
Current	300ma
Charging Time	1.5H
Working Distance	10M